




Assembly Manual: Retractable Canopy for 12X12 Shade Voila Pergola

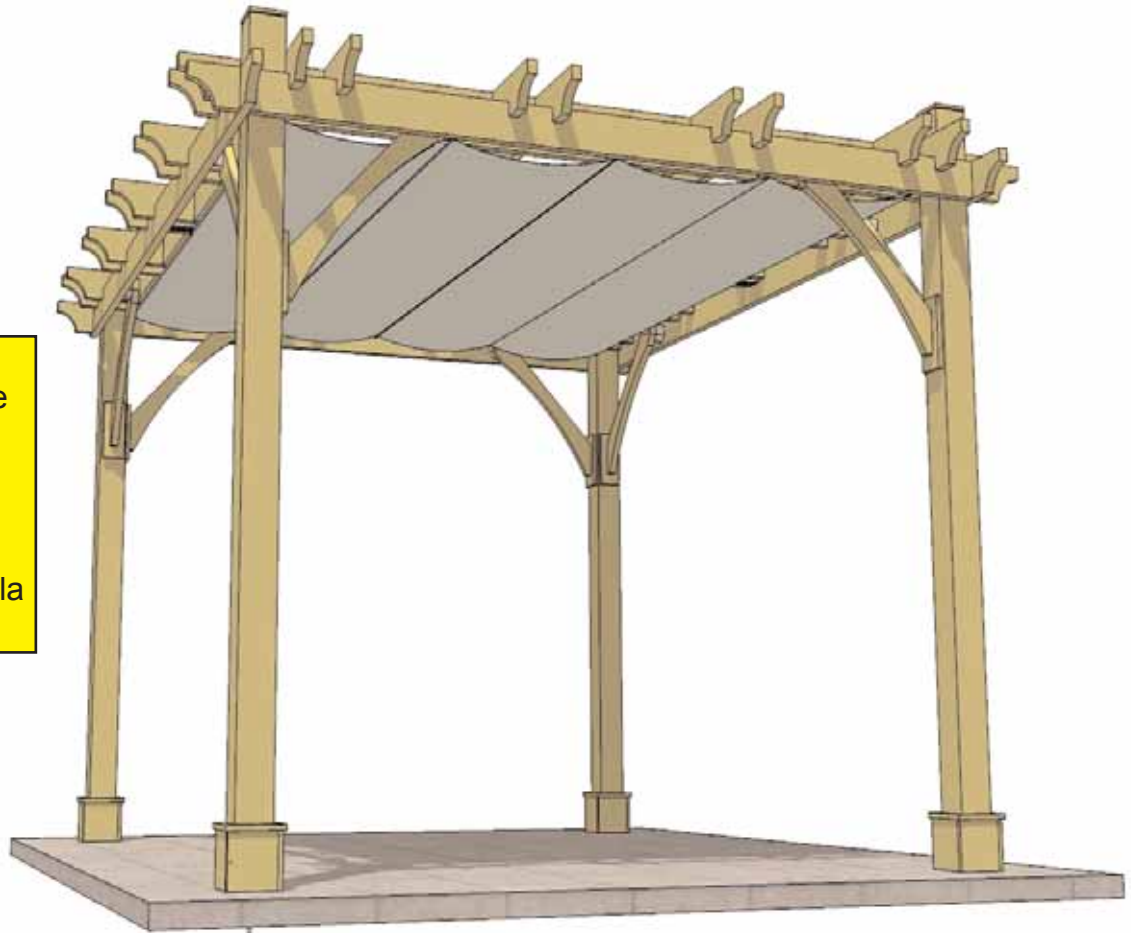

Important:

Drive Beam can only be installed in the same direction as the 12x12 Pergola Joists (Part D). Be sure to confirm orientation of the Pergola before installation.

Care and Maintenance -


Our canopies are designed to be maintenance free. Reasonable care to remove accumulated dirt and debris is all that is required to get 10 or more years of enjoyment out of your Shade Voila Pergola Canopy.

Customers agree to hold Shade Voila and any Authorized Dealers free of any liability for improper installation, maintenance and repair of any Shade Voila products.

In the event of a missing or broken piece, simply call the Customer Support Line @ 1-800-850-8500 within 30 days of the delivery of your purchase. It is our commitment to you to courier replacement parts, free of charge, within 10 business days of this notification. Replacement parts will not be provided free of charge after the 30 day grace period.

12x12 Úca^X[ããPergola Retractable Canopy Parts List

Parts List




8 - 1 1/2" screws




1 - Canopy Pull Handle



6 - Canopy Locking Clips
(2 1/2" long x 1 1/4" wide)

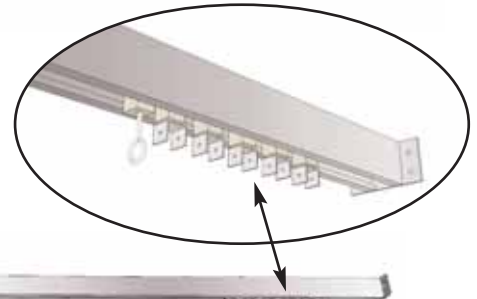

1- Drive Beam- 144" long

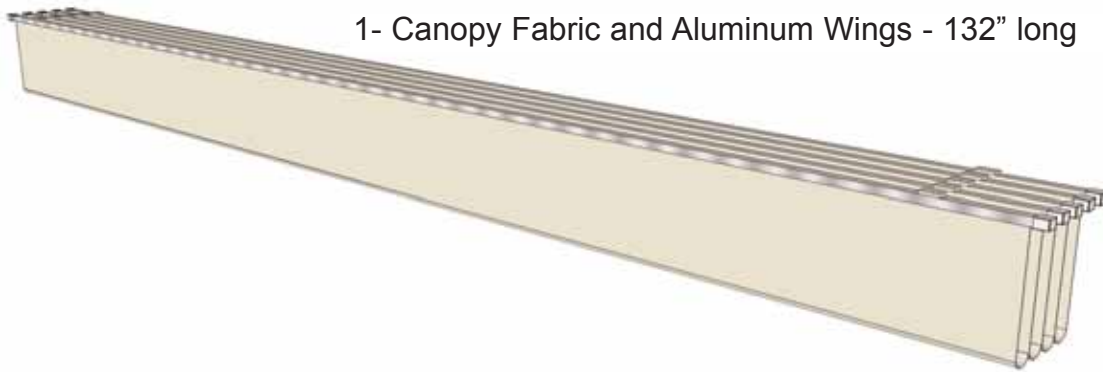

1- Canopy Fabric and Aluminum Wings - 132" long

Tools Required (Not Provided)



Screw Gun/Drill



Level



Tape Measure



Wood Clamp



Ladders

Safety Equipment Required (Not Provided)



Safety Glasses





Work Gloves

Installation of the GUXYJc]U Retractable Canopy couldn't be easier.


- A. Attach the Drive Beam to Outside Girder with supplied screws.
- B. Connect Canopy Fabric with Aluminum Wing Supports to Drive Beam with supplied Locking Clips.
- C. Using Canopy Pull Handle, retract the Canopy and tighten to desired position!

Installation will require 2 people.

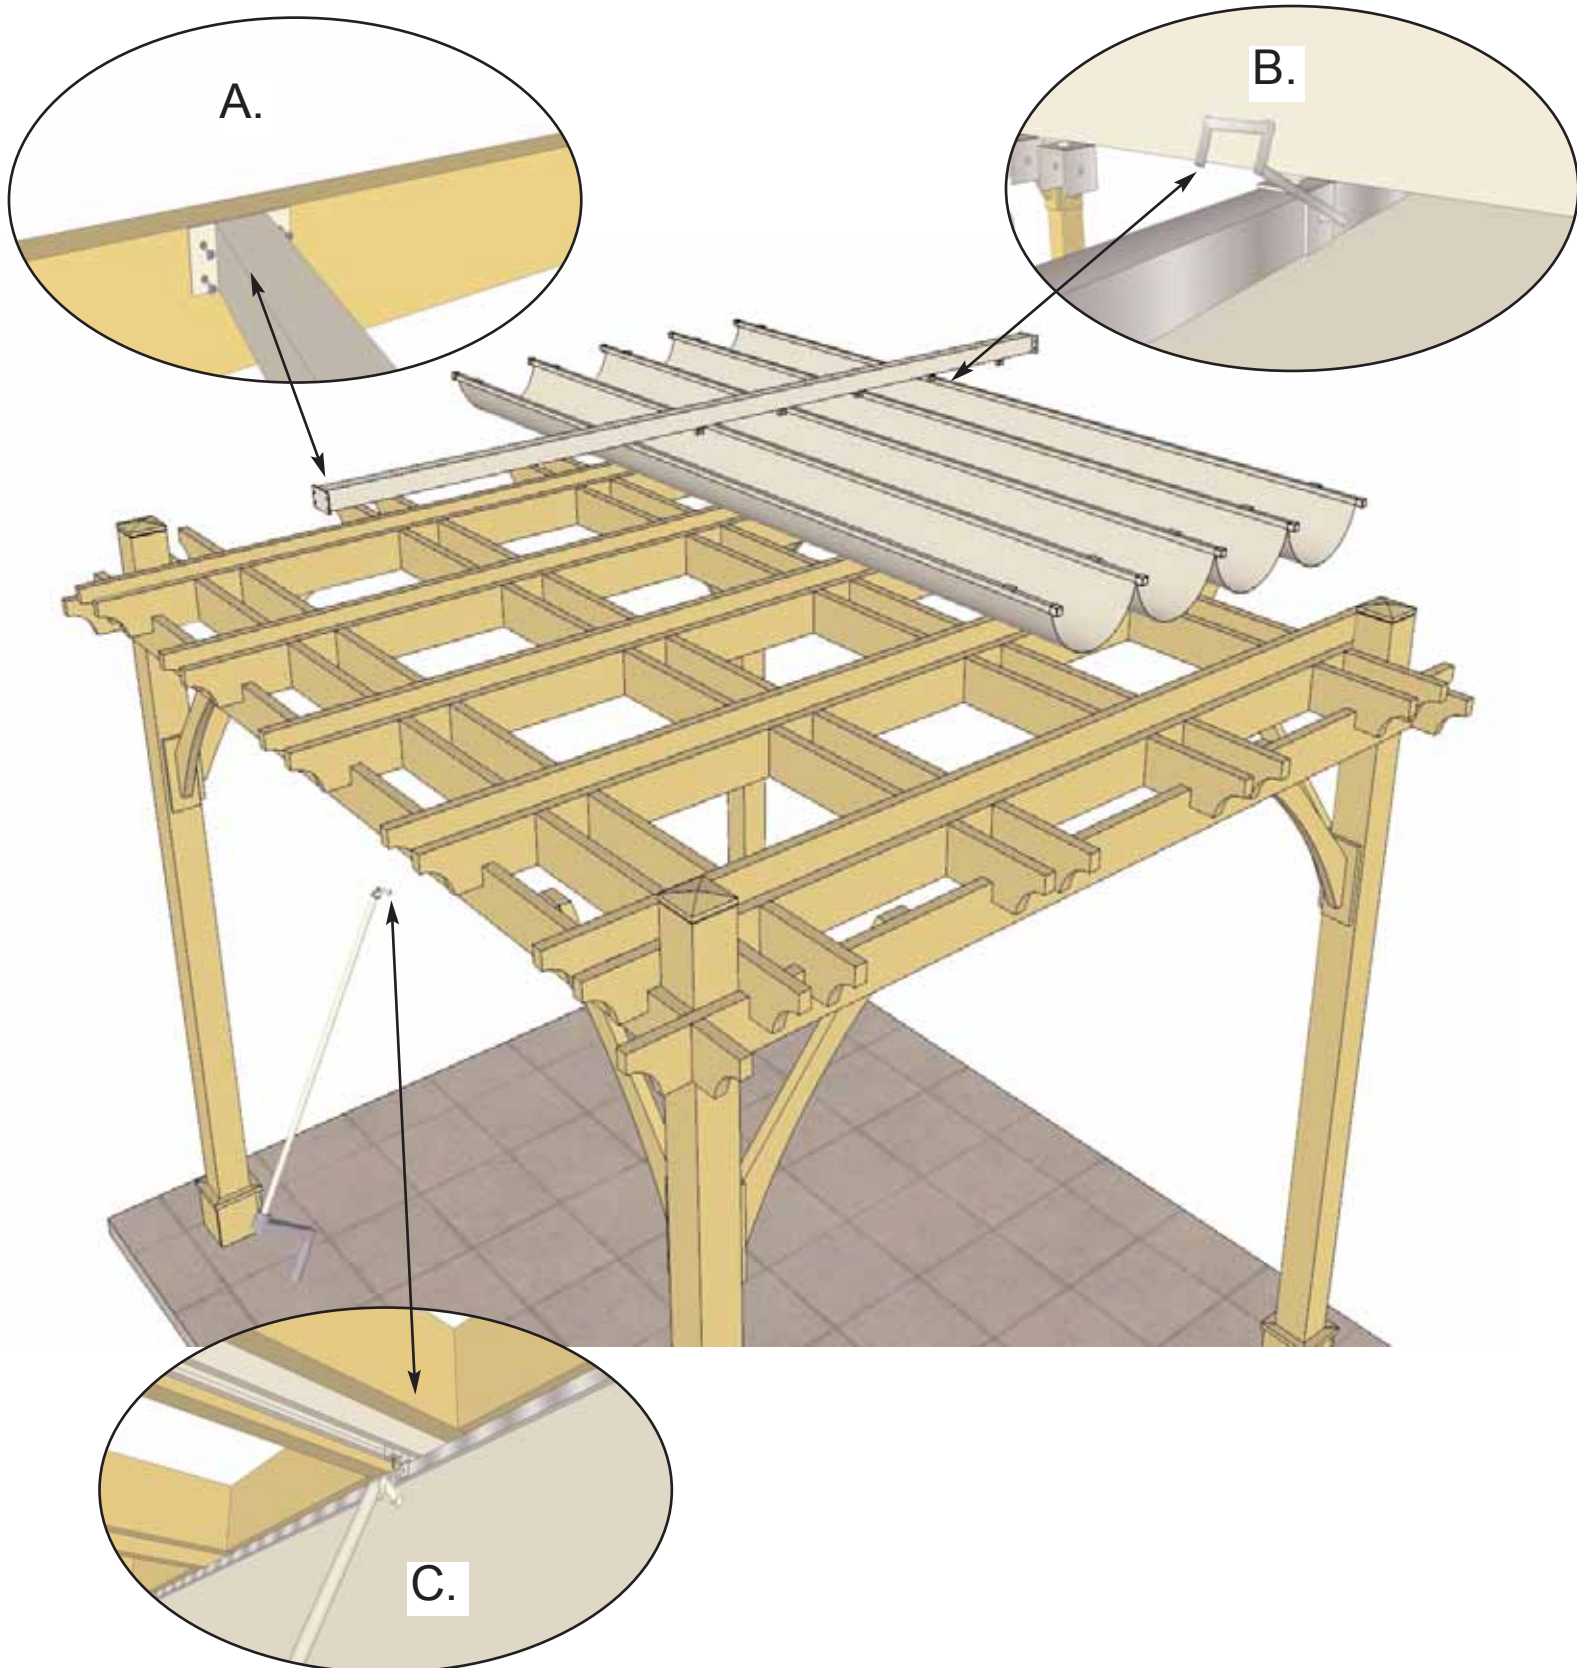


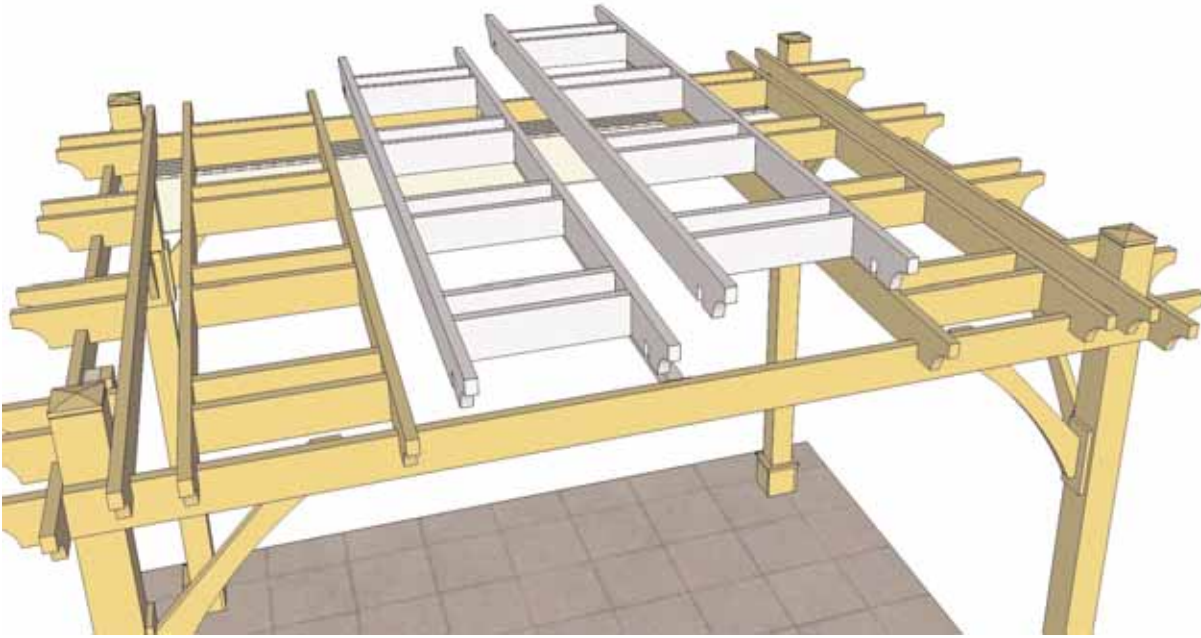

1. To make it easier to install Retractable Canopy Drive Beam, we recommend leaving center Ladder Sections off until Drive Beam and Canopy are attached.


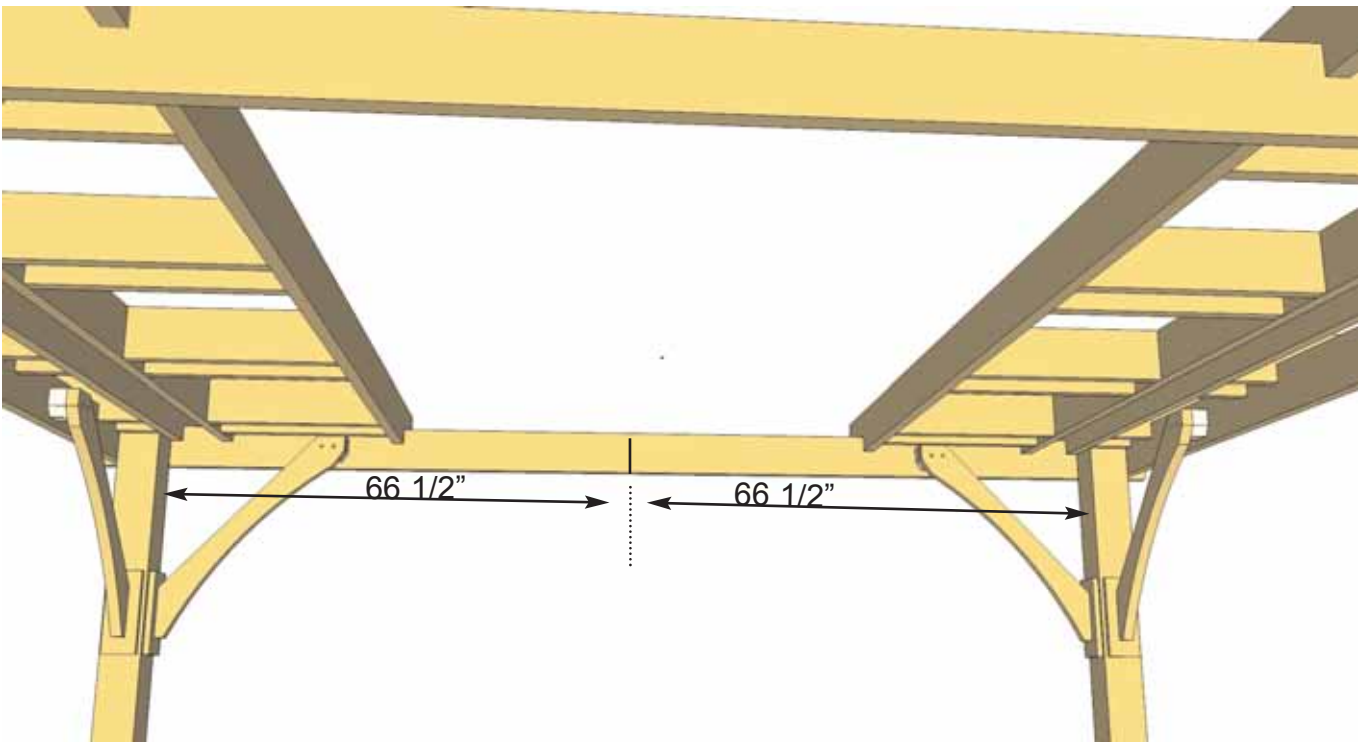


2. Find center point on Girder between Posts (66 1/2") and mark.

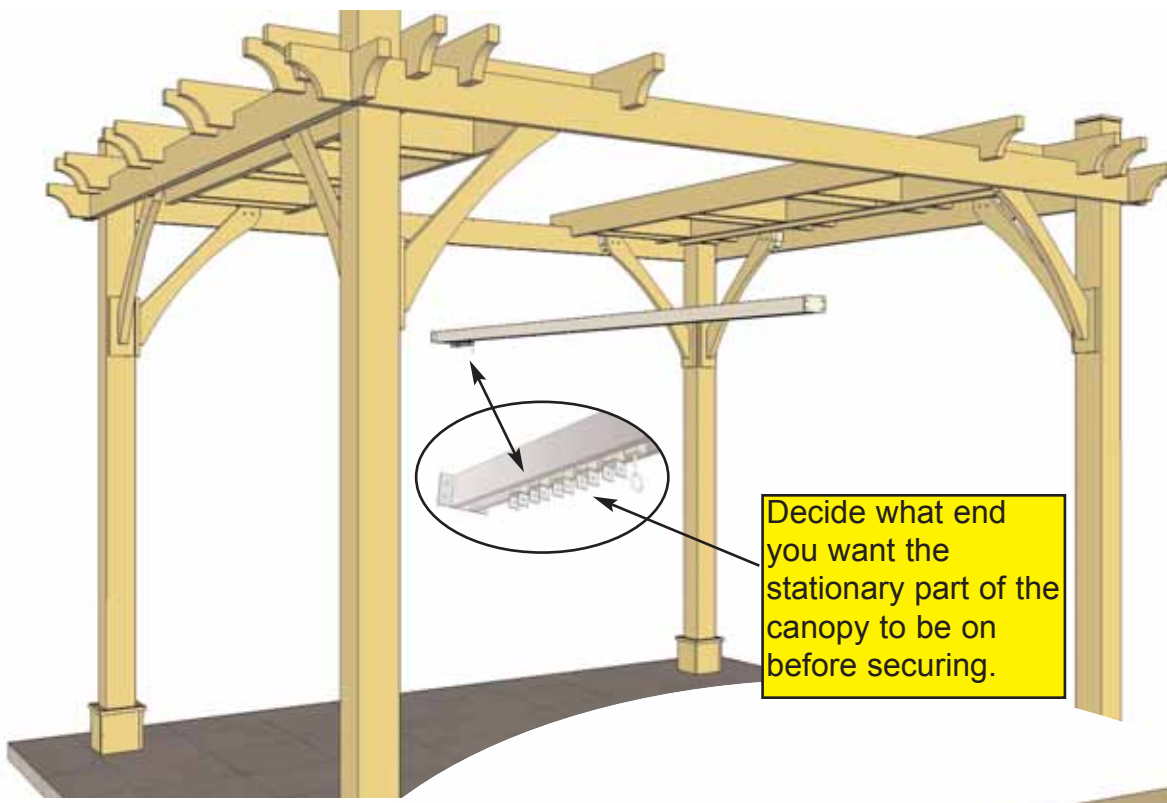


3. With Step ladders and another helper, lift up the Drive Beam and center on Girder. Be sure to decide first what end you want to designate as the stationary end of the Drive Beam. ie. The Canopy will always gather on this end and may block your view.


4. Position Drive Beam so it is even with the top of the Girder as illustrated to the right. Drive Beam should be evenly spaced between Pergola Posts (66 1/2"). before attaching. Secure with 4- 1 1/2" screws per end.

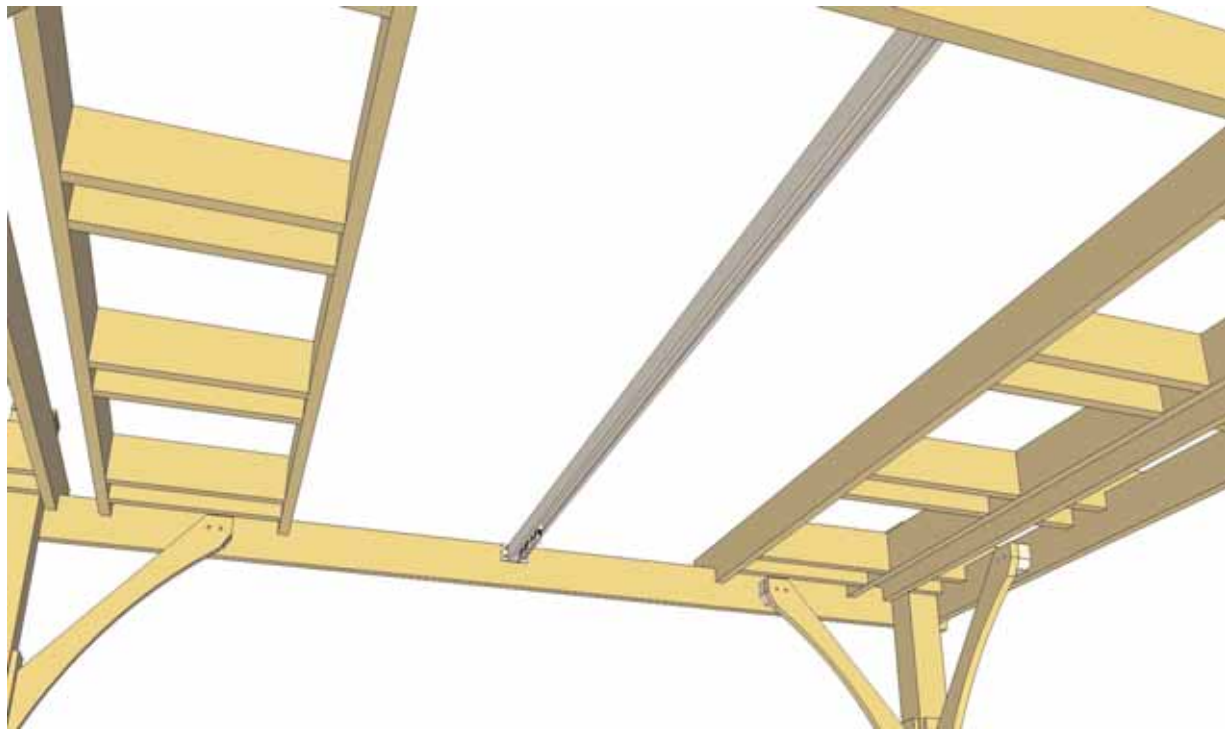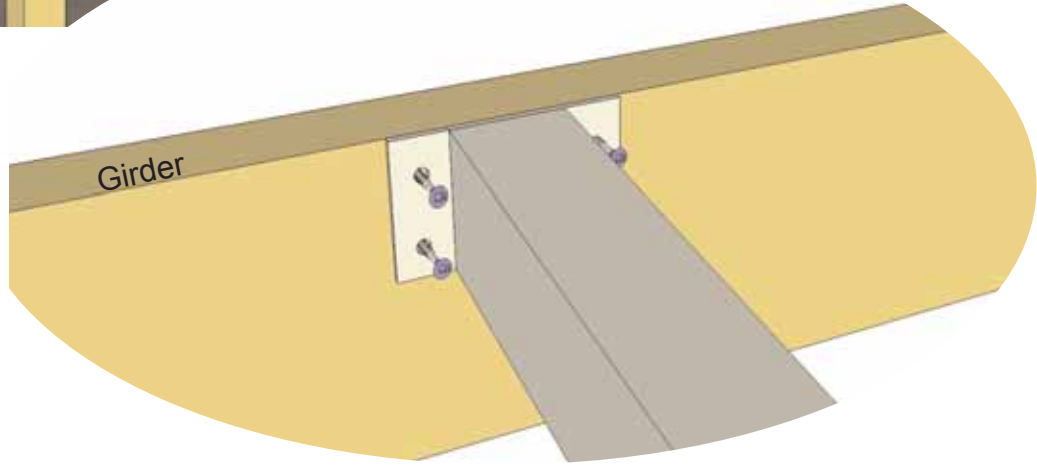

Note: there are 6 Wings, 6 Locking Clips and 6 Rolling Brackets.


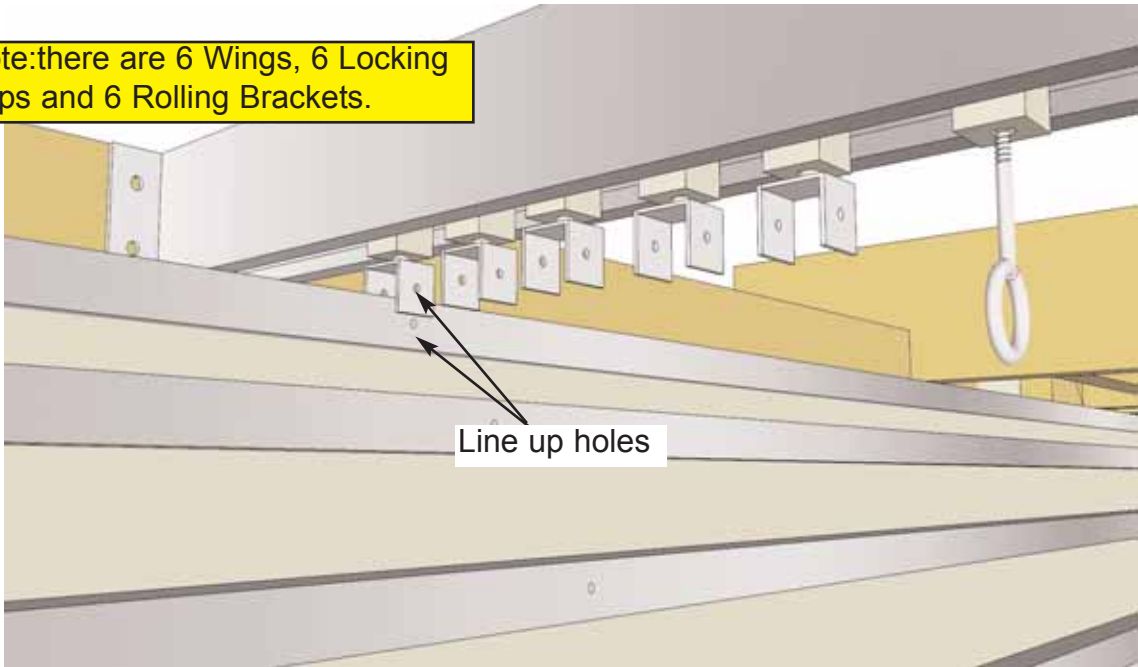



5. With your helper, carefully lift up Canopy Fabric with Aluminum Wing. Starting with 1st Wing, line up holes with Drive Beam Rolling Bracket.

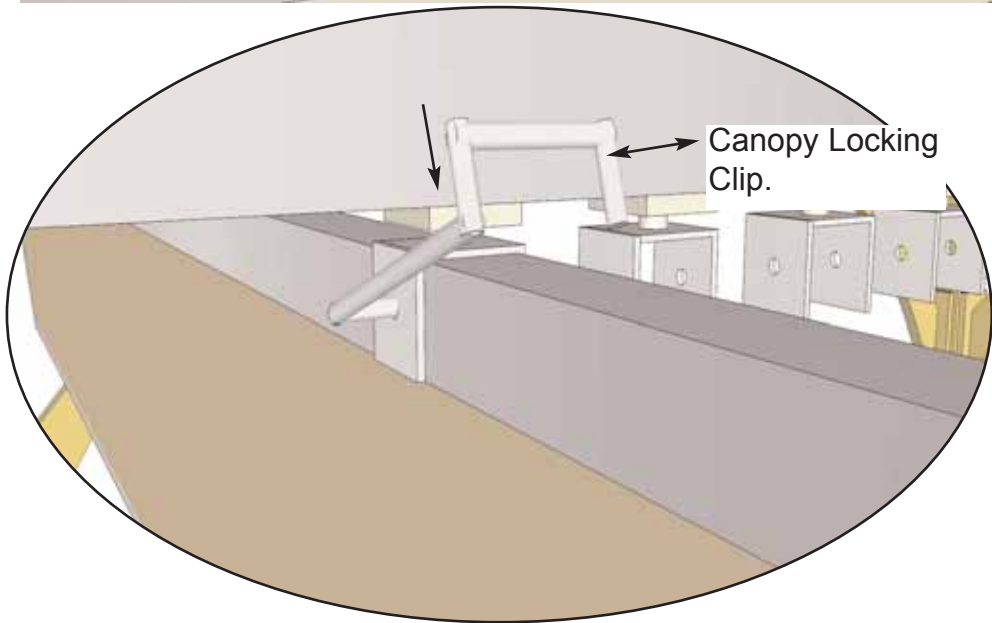


6. With holes lined up, slide Canopy Locking Clip through holes and lock Wing to Bracket.


For the first Clip, you will need to start from the outside and then move to the inside for subsequent Clips. See **Step 8** for a better perspective of alignment of remaining Clips,

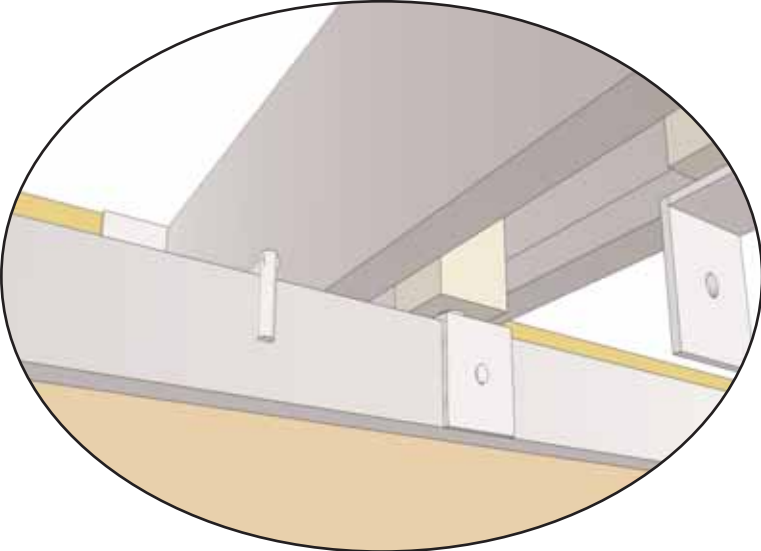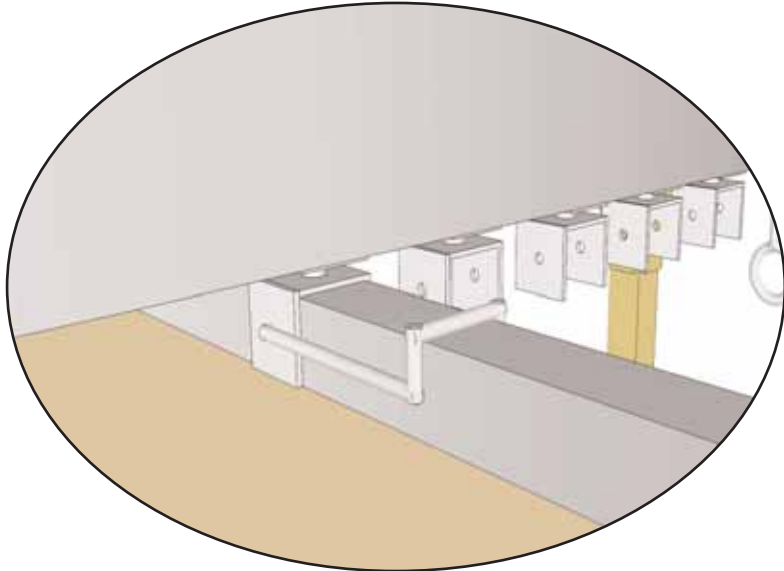

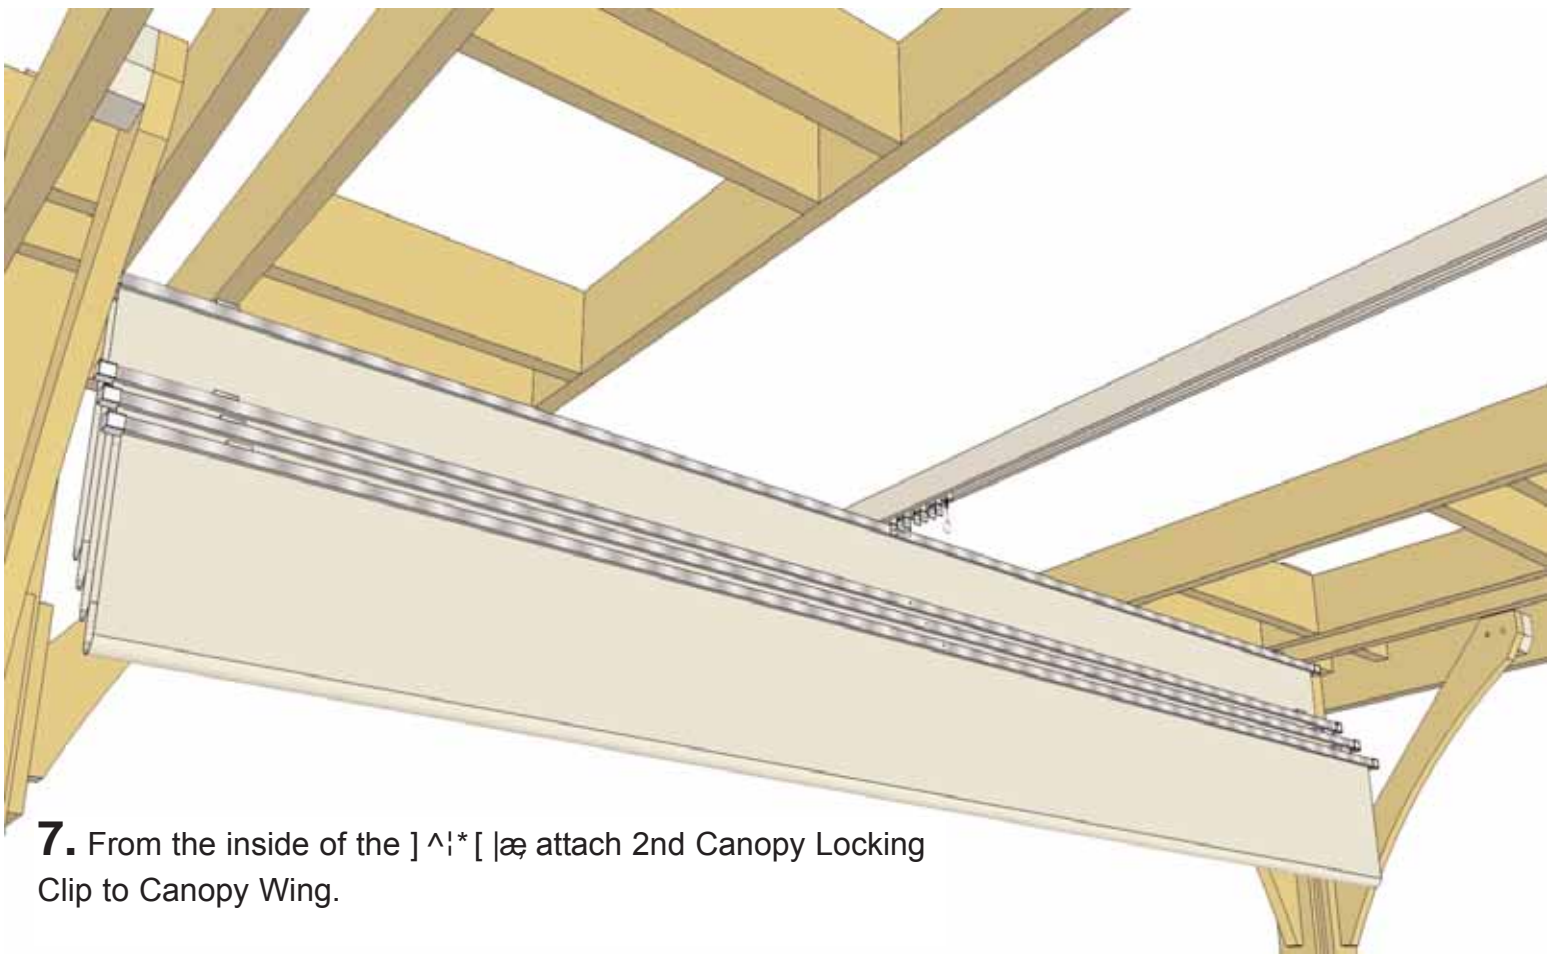



7. From the inside of the] ^!^* [|æ attach 2nd Canopy Locking Clip to Canopy Wing.

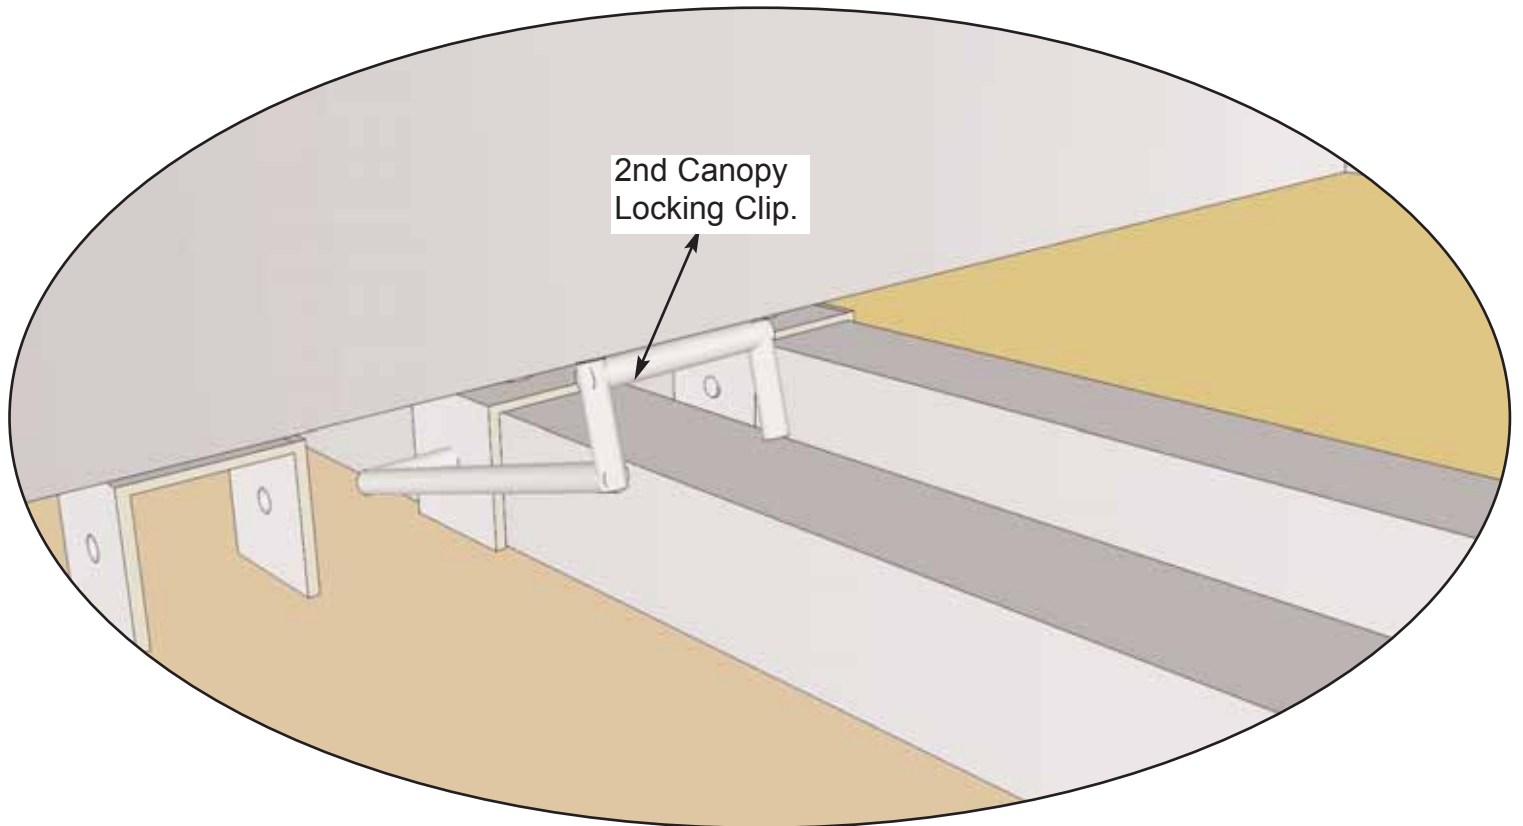

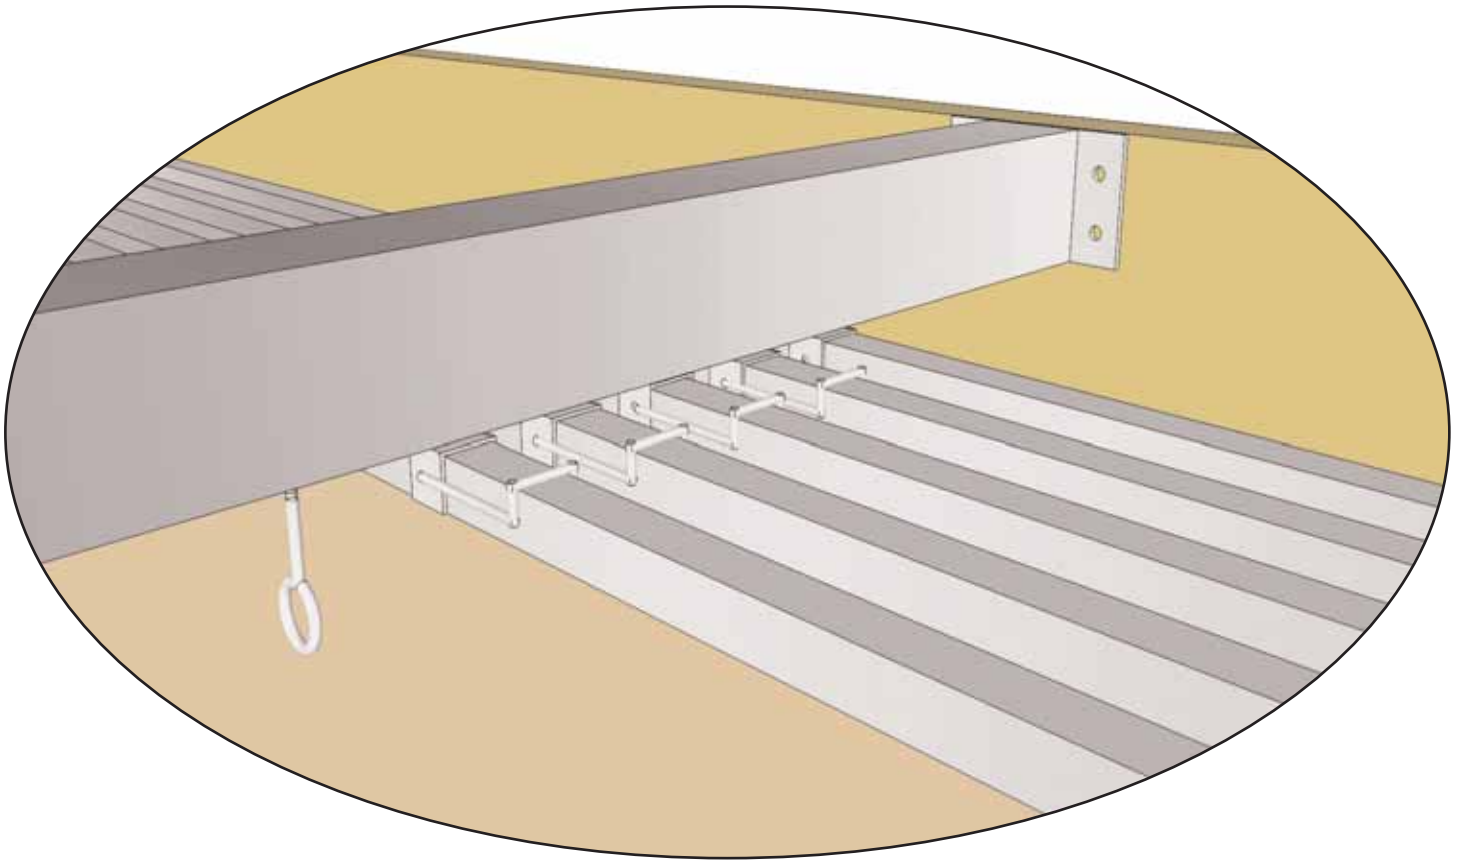


8. Complete remaining Canopy Locking Clip / Wing attachments.

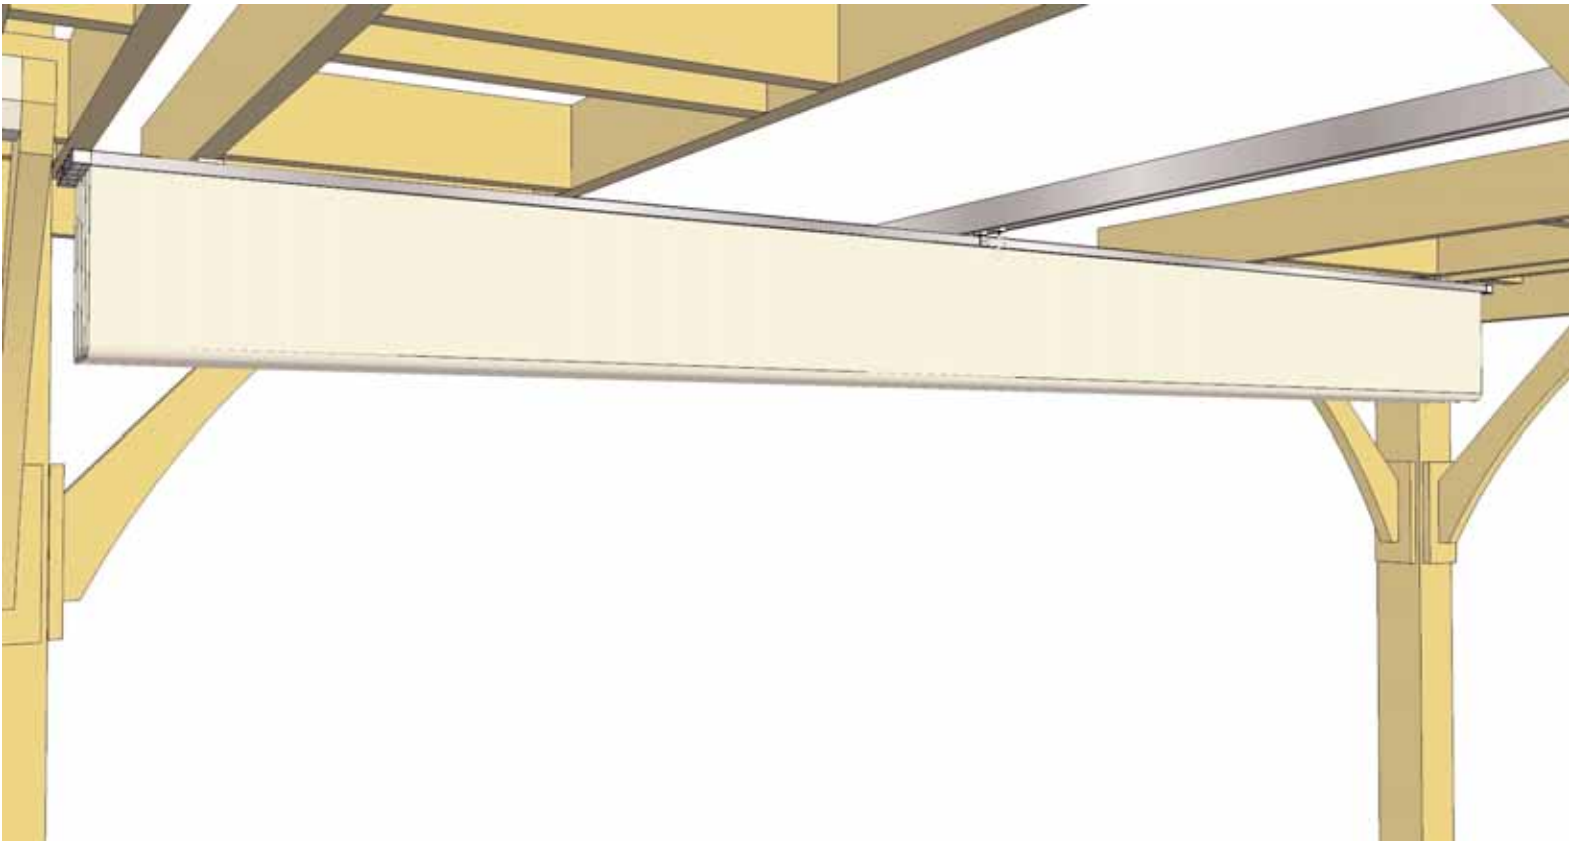


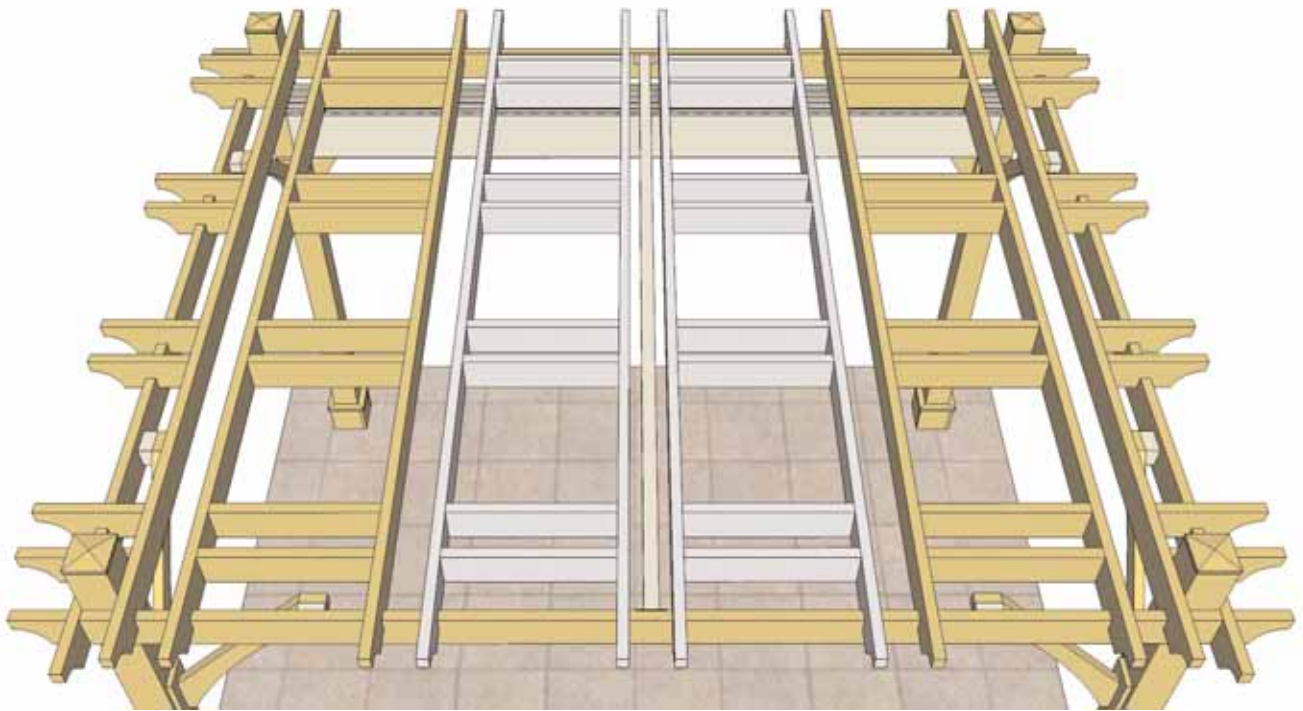

9. With Drive Beam and Canopy secured, attach Pergola Ladder Sections as per **Step 17** of **Section A** of Pergola Main Assembly Manual.

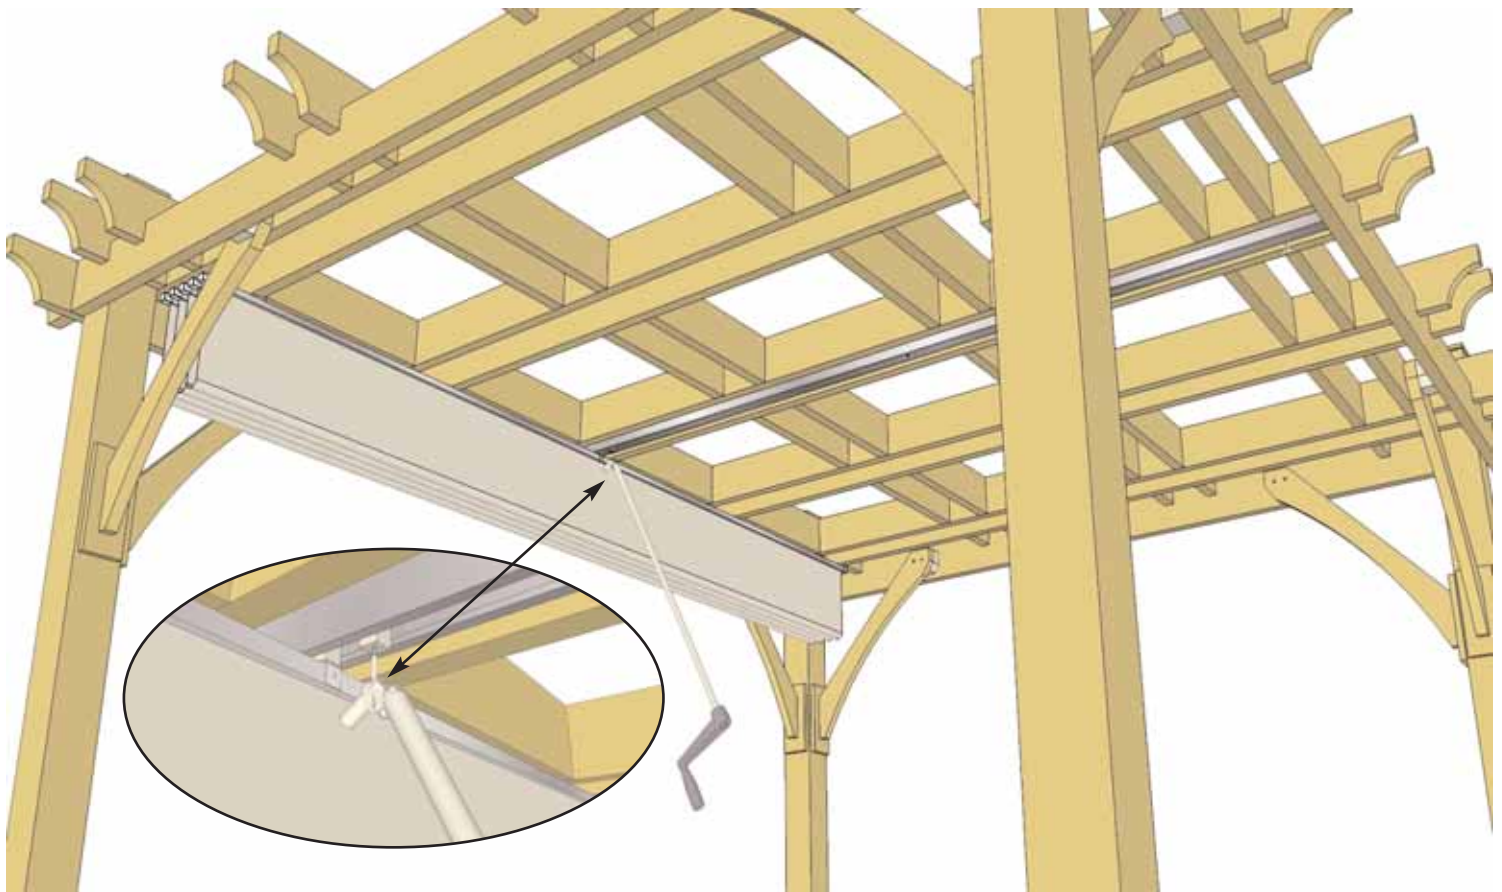

10. To retract the Canopy, locate the Canopy Pull Handle and place end into Locking I-Bolt. The Canopy can be locked and unlocked by turning the I-Bolt with the Pull Handle.

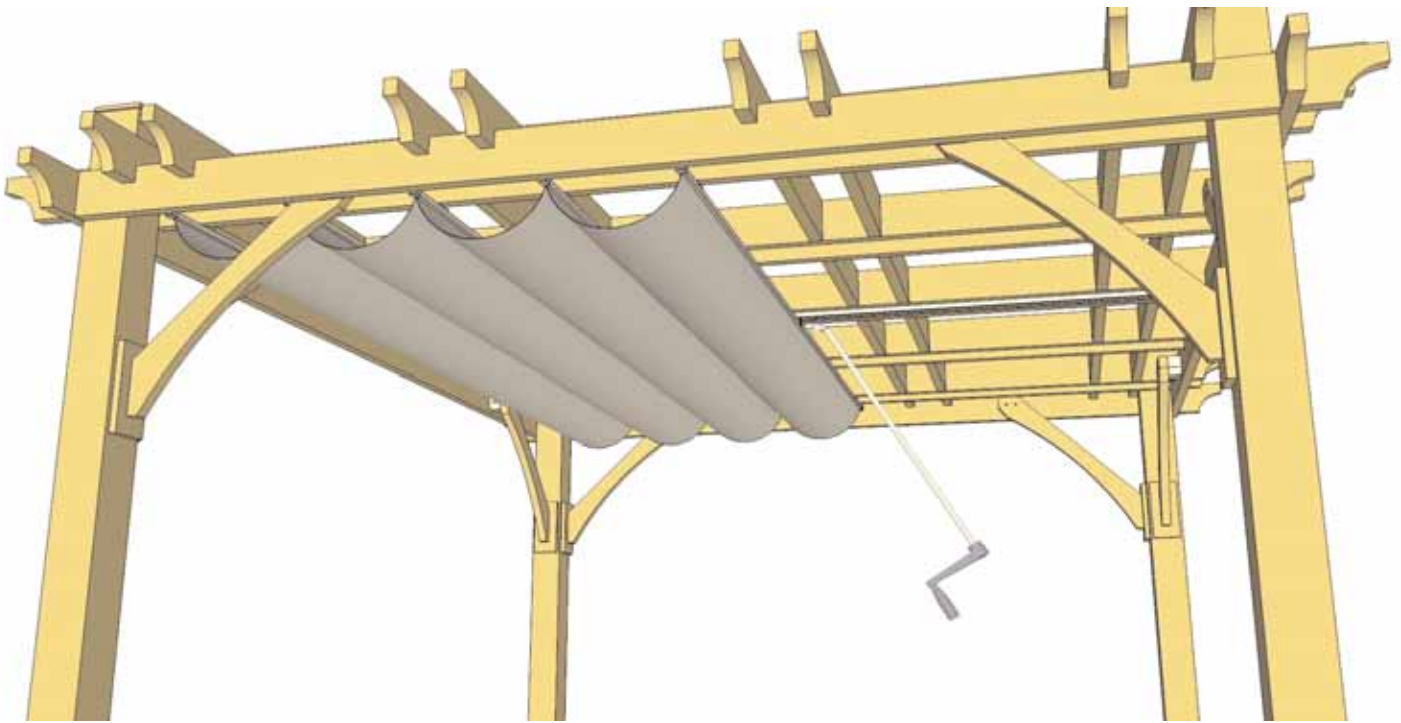

11. To retract the Canopy, unscrew locking I-Bolt with the Handle and pull the Canopy to desired length and lock. To close, follow same procedure. Be sure to place Canopy Pull Handle in safe and secure location for future use.

